

Building A Windows Embedded Standard 7 Image For The Aries SBC

BSP User Manual – Part Number 7480740

Revision	Date	Comment
A.00	10/28/2015	Initial release

FOR TECHNICAL SUPPORT PLEASE CONTACT:

support@diamondsystems.com

© Copyright 2015 Diamond Systems Corporation 555 Ellis Street Mountain View, CA 94043 USA Tel 1-650-810-2500 Fax 1-650-810-2525 www.diamondsystems.com



CONTENTS

1.	INT	TRODUCTION	3
2.	SCO	OPE	3
3.	TA	RGET HARDWARE REQUIREMENTS	3
4.	SYS	STEM REQUIREMENTS	4
	4.1	DEVELOPMENT COMPUTER :	4
5.	FEA	ATURES AND DRIVER DETAILS	4
6.	BU	ILDING AND DEPLOYING A RUN-TIME IMAGE	5
	6.1	GENERATING PMQ FILE	5
	6.2	CREATING ANSWER FILE AND IMPORTING PMQ FILE	7
	6.3	ADDING COMPONENTS TO THE ANSWER FILE	9
	6.4	CREATING A USB INSTALLATION MEDIA	16
	6.5	EXTRACTING WIM FILE	22
	6.6	USING THE FINAL IMAGE:	22
	6.7	INSTALLING DRIVERS AND SOFTWARE FOR ARIES	23
	6.8	BOOTING TO WINDOWS WELCOME MODE	
7.	AP	PENDIXES	29
	APPEN	NDIX A: STEPS TO MAKE USB/ SATADOM DRIVE BOOTABLE:	
	APPEN	NDIX B: STEPS TO INSTALL WINDOWS EMBEDDED STANDARD 7 TOOLKIT ON A DEVELOPMENT	
	COMP	UTER	30
	APPEN	NDIX C: STEPS TO TEST HTTP SERVER:	30
	APPEN	NDIX D: STEPS TO TEST FTP SERVER:	
	APPEN	NDIX E: STEPS TO TEST OS PRODUCT KEY LICENSE:	
	APPEN	NDIX F: STEPS TO START HYPERTERMINAL	
	APPEN	NDIX G: STEPS TO CREATE WINPE BOOTABLE USB DRIVE:	36
	APPEN	NDIX H: STEPS TO FORMAT SATADOM	37
	APPEN	NDIX I: STEPS TO APPLY WES7 IMAGE	38



1. INTRODUCTION

Windows Embedded Standard 7 is a componentized version of Windows 7 Professional that contains all of the features, functionality, and familiarity of the Windows 7 Professional operating system. Windows Embedded Standard 7 enables you to rapidly develop reliable and full-featured connected devices. Windows Embedded Standard 7 supports standard hardware and software which makes building a run-time image easier.

2. SCOPE

This document details the steps involved in creating, customizing and installing the Windows Embedded Standard 7 for the Aries single board computer.

3. TARGET HARDWARE REQUIREMENTS

Aries SBC with the following specifications:

- Quad core E3845 1.91GHz or dual core E3826 1.46Ghz processor
- 2GB or 4GB soldered DDR3 SDRAM
- 2 Gigabit Ethernet ports
- 1 SATA port socket
- 3 USB 2.0 ports and 1 USB 3.0 port
- 4 RS-232/422/485 serial ports
- 24-bit LVDS LCD display with dual independent displays
- VGA CRT video output
- HDMI
- DisplayPort
- ALC892 HD Audio
- Programmable Watchdog Timer (from data acquisition FPGA)
- Shared expansion socket auto-selects for either PCIe MiniCard or mSATA flashdisk modules
- PCI-104 expansion socket
- PC/104 expansion socket
- Universal Driver 7.0 for data acquisition



4. SYSTEM REQUIREMENTS

The following hardware and software are required to create the WE7 image for the Aries SBC.

4.1 Development Computer :

Hardware

The development computer must meet or exceed the following hardware requirements:

- o 1 GHz 32-bit (x86) or 64-bit (amd64) processor
- o 1 GB of system memory (32-bit), 2 GB of system memory (64-bit)
- o 7 GB free hard drive space for complete installation
- One or more of the following media drives:
 - USB 2.0 port

Software

The development computer needs to have the following software requirements:

- o It must be running Windows 7 operating system
- o It must have Microsoft .NET Framework 2.0 or higher installed
- Microsoft Windows Embedded Standard 7 Tool kit must have been installed in the Development PC. Please see Appendix B for instructions on installation of the WES7 tool kit on your development PC.

5. FEATURES AND DRIVER DETAILS

The BSP image will have all of the following device drivers installed and pre-configured.

- Display driver
- USB 3.0 driver
- Network Adapter driver
- Windows Embedded IO driver
- Universal Driver 7.0
- HTTP, FTP servers pre-installed
- HyperTerminal
- AriesTestAppsv0.1 file in folder c:



6. BUILDING AND DEPLOYING A RUN-TIME IMAGE

The section will explain the steps to be followed to create the target Windows Embedded Standard 7 image.

6.1 Generating PMQ File

The device component includes support for all the hardware attached to your system, including device drivers for video, networking, and so on. Below is the step-by-step procedure to create a target device component:

• Take a USB thumb drive of capacity 4GB or more, insert it to Development PC and format it. Open ICE (Image Configuration Editor) that comes installed with the Windows Standard 7 Tool Kit. Go to Tools->Create Media->Create IBW Image with Full Distribution Share.

🚰 Windows Embedded St	andard 7 : Image	e Configuration E	ditor							
File Edit Validate	Tools Insert	Community	Help		_					
i 🔮 🍰 🗟 🔚 🗶 i C	Update A	nswer File to Late	st Package Versions in E)S						
Distribution Sharo	Analyze S	tatic Dependenci	es		nas	Properties				
C\Program Files\\	 Hide Sens 	itive Data			1	Properties				
SOEM\$ Folders	🚰 Create Co	onfiguration Set							Filter view by:	All Set
Dut-of-Box Dri	Explore D	istribution Share			ne		Value	Pat	h	Pass
a 🔒 Packages	Create M	edia		×		Create IBW Ima	ge with full Distribut	ion Share.		
Driver						Create Windows	s PE Image			
FeaturePacity LanguagePacity	K ack					Create IBW Ima	ge From Answer File			
Product					_		-			
Templates										



• Select the target folder for the image. Give the thumb drive as the destination, here its k.

🚰 Windows Embedded Standard 7 : Ima	e Configuration Editor		
<u>F</u> ile <u>E</u> dit <u>V</u> alidate <u>T</u> ools <u>I</u> nse	t <u>C</u> ommunity <u>H</u> elp		
i 🔮 🍃 🗃 🔜 🗶 i 🔍 i 🐼 🇐 i			
Distribution Share	Answer File	Settings Properties	
C:\Program Files\Windows Embe	d Right click to create or open an answ		Filter
Out-of-Box Drivers		Name Value	Path
Packages			
FeaturePack			
LanguagePack			
Product			
🔄 Templates	Create IBW Dick		
	Create IDW Disk		
	Select the desired distribution	share	
	C:\Program Files\Windows E	mbedded Standard 7\DSSP1	
	Select the target folder for the	e image	
	k		
	_ <u>T</u> arget Architecture		
	@ v86 _ v64		
	- X04 X04	OK Cancel	
		1	

Figure 2: Create IBW Disk

Note: Use k: and not k:\



• Insert the thumb drive into the Aries SBC and start the SBC. Windows will start loading. *Note:* If any other media is connected then make the thumb drive boot order the first one in the BIOS settings.

• Wait for the window shown below.

🏘 Install Windows		
	Standard 7	
	• Build an Image	
	Deploy an Answer File or WIM	
<u>L</u> aunch WinPE Co	ommand Prompt	
Copyright © 2010 Mic	rosoft Corporation. All rights reserved.	

Figure 3: Launch WinPE Command Prompt

- Click on Launch WinPE Command Prompt.
- Enter the following commands from the DOS Command Prompt: X:\sources> copy tap.exe c:\

X:\sources> cd c:

C:\> tap.exe

Here c:\ is the thumb drive that has been formatted to use WinPE. Once tap.exe is executed as above, *devices.pmq* file will be generated in C:\ i.e. the thumb drive in this case.

The *devices.pmq* file that is generated has the hardware details of the target Aries SBC.

- Format the SATADOM disk by following the steps in Appendix A.
- Copy the *devices.pmq* file from the thumb drive into the development PC as *Aries.pmq*.



6.2 Creating Answer File and Importing PMQ File

Start ICE (Image Configuration Editor).

• Go to File menu choose New Answer File. (Ctrl N)

0	arie	s_v0.1.x	ml - Windov	ws Embe	dded Sta	ndard 7 : Image	Configura	ation Editor
	File	Edit	Validate	Tools	Insert	Community	Help	
-	1	New Ar	nswer File			Ct	rl+N	
l	<u> </u>	Open A	nswer File			Ct	rl+0	ar Filo
ľ	P.	lew Ans	wer File e					aries v0.1
		Save Ar	nswer File			Ct	trl+S	Driver
		Save Ar	nswer File As					FeaturePack
		Import					•	LanguagePack
		Export					•	Product
		Select D)istribution (Share				
		Close D	istribution S	hare				



• From the File menu, choose Import->Import PMQ.

0 ⁻	arie	es_v0.1.x	ml - Windo	ws Embeo	dded Star	ndard 7 : Image	Configura	ation Editor
F	ile	Edit	Validate	Tools	Insert	Community	Help	
2	1	New Ar	nswer File			Ctr	l+N	
	₹.	Open A	Answer File			Ctr	l+0	ar filo
	>	Close A	Answer File					aries v0.1
i.	Save Answer File					Ct	rl+S	Driver
	Save Answer File As							🔓 FeaturePack
		Import					×	Import PMQ
		Export					•	Import Package(s)
	Select Distribution Share							Import Import PMQ File
		Close D)istribution (Share				

Figure 5: Import PMQ



• The **Import PMQ File** dialog box appears. Select the *devices_aries.pmq* file from the directory where you copied it from the thumb drive.

Timport PMQ File								
Computer	► Removable Disk (K:) -	Search Remove	able Disk (K:) 🛛 🔎					
Organize 🔻 New folder	-	= • 🔟 📀						
🚖 Apps 🔺	Name	Date modified	Туре					
Documents	\mu воот	11/19/2012 2:00 PM	File folder					
	퉬 DS	11/19/2012 1:56 PM	File folder					
	🌗 EFI	11/19/2012 1:32 PM	File folder					
T videos	퉬 sources	11/19/2012 5:05 PM	File folder					
Computer	퉬 SUPPORT	11/19/2012 1:32 PM	File folder					
Local Disk (C)	퉬 UPGRADE	11/19/2012 1:32 PM	File folder					
Local Disk (C:)	devices_aries.pmq	11/19/2012 6:37 PM	PMQ File					
Local Disk (E:)								
New Volume (F:)								
Removable Disk								
👸 Removable Disk								
	III							
File nam	ne: devices_aries.pmq	▼ PMQ files (*.pm)	q) 🔻					
		Open	Cancel					
			411					

Figure 6: Select PMQ File



6.3 Adding Components to the Answer File

To add packages to the answer file, right-click the package and click **Add to Answer File** (or double click the component that has to be added to the answer file). There is no limit to the number of packages that can be added to the answer file; however, the size of the image grows as more packages are added. Most of the packages added here come installed with a normal Windows 7 image, but the packages can be added as required.

1. In the **Distribution Share** pane, click **Packages**, and then click **FeaturePack** and add the packages listed below to the answer file.



Figure 7: Add Packages to Answer File



Figure 8: List of Added Component to the Answer File



Similarly add the following components to the answer file:

- .NET Framework -> .Net Framework 2.0
- .NET Framework -> .Net Framework 2.0 Client Profile
- Application Support -> COM OLE Application Support
- Application Support -> COM+ Application Support
- Application Support -> Win32 Application Runtimes and Libraries
- Boot Environment -> Windows Boot Environment
- Browsers -> Internet Explorer 8
- Data Access and Storage -> Windows Data Access Components
- Data Integrity -> Shadow Copy Volume Interface
- Devices and Printers -> Device Framework
- Devices and Printers -> Device User Experience
- Devices and Printers -> Driver Frameworks
- Diagnostics -> Common Diagnostic Tools
- Diagnostics -> problem Reports and Solutions
- Embedded Enabling features -> Bootable Windows USB Stack
- Embedded Enabling features -> Edition Branding -> Windows Embedded Standard Startup Screens
- Internet Information Services IIS
- Management -> System Management
- Management -> Windows Update
- Management -> Power Management
- Management -> Windows Application Compatibility
- Management -> Windows Power Shell 2.0
- Networking -> Base
- Networking -> BITS
- Networking -> Domain Services
- Networking -> IRDA and UNIMODEM
- Networking -> Network and Sharing Center
- Networking -> Network Diagnostics
- Networking -> Peer Networking
- Networking -> Quality of Service
- Networking -> Remote Access Service (RAS)
- Networking -> Small Networking Services
- Networking -> Telephony API Client
- Networking -> Telnet Server
- Networking -> Windows Firewall
- Networking -> Wireless Networking
- Remote Connections -> Remote Desktop Connection
- Security -> Active Directory Rights Management
- Security -> Application Security
- Security -> Bitlocker Secure Startup
- Security -> Security Base
- Security -> Security Credentials -> Credentials and Certificate Management
- Security -> Trusted Platform Module (TPM) Management
- System Services -> File System
- System Services -> Remote Procedure Call
- System Services -> Windows Installer
- User Interface -> Help
- User Interface -> Windows Shell
- User Interface -> Accessibility
- User Interface -> Mobility Center and SideShow
- User Interface -> Natural Language 6
- User Interface -> Search Indexing
- User Interface -> Text Services Framework
- User Interface -> Windows Search



- Graphics and Multimedia -> Windows Media Player 12
- 2. In the **Distribution Share** pane, click **Packages**, and then click **Driver** and add Multifunction -> Generic Multifunction Card Driver
- 3. In the **Distribution Share** pane, click **Packages**, and then click **LanguagePack** and add the package **en-US** to the answer file by following the above step.
- In the Answer File pane, click FeaturePack->Embedded Enabling Features->Bootable Windows USB Stack->Kernel PnP_x86. In the right side Window Go to Settings, change the Filter view by to "2 Offline Servicing". Then Change the following values to 6 and 15000.

Name	Value	Path	Pass
BootDriverFlags	6		
PoolBootPartitionTimeout	15000		

The updated values will appear as:

17 : Image Conf	figuration Editor			
Community	Help			
17 : Image Cont Community	figuration Editor Help r File Boot Environments Windows Boot Environment Browsers Data Access and Storage Devices and Printers Diagnostics Embedded Enabling Features Embedded Enabling Features Embedded Enabling Features Edition Branding	Settings Properties Name Value BootDriverFlags 6 PollBootPartitionTimeout 15000	Path Pass BootableI-PnP_x86 P2* BootableI-PnP_x86 P2*	Filter view by: 2 Offline Servicing
e D E D D D D	 Lattion Branding Windows Embedded Standard Sta Fonts Graphics and Multimedia International Management Networking Remote Connections Security Active Directory Rights Management Application Security LUA-Settings_x86 			

Figure 9: Kernel-PnP_X86

 In the Answer File pane, click FeaturePack->Security->Application Security->LUA-Settings_x86. Similar to above step, go to Settings and change Filter view by to 2 Offline Servicing. The change the value to True.



Name	Value	Path	Pass
EnableLUA	true		

ard 7 : Ir	nage Configuration Editor						
<u>C</u> or	nmunity <u>H</u> elp						
		\frown					
	Answer File	Settings	Properties				
ird 🔺	Bootable Windows USB Stack Kernel-PnP_x86						Filter view by 2 Offline Servicing
	🔒 Edition Branding	Name		Value	Path	Pass	
	Windows Embedded Standard Star	🗟 E	nableLUA	false	Applicatitir	ngs_x86 P2	
	Graphics and Multimodia					-	
	International						
	Management						
ile	Networking						
	Remote Connections						
ile	Security						
	Active Directory Rights Management						
ile	Application Security						
	ULA-Settings_x86						
Ξ	Bitlocker Secure Startup						
iror	Security Base						
	Security Credentials						
	Trusted Platform Module (TPM) Mana						
	System Services						

Figure 10: LUA-Settings_X86

6. In the Answer File pane, Click Product->Operating System->Foundation Core->Windows Embedded Edition->PnpSysprep_x86. Go to the right side of the IDE to the Settings Window, and change File view by to 3 Generalize.

Change the value to true.

Name	Value	Path	Pass
DoNotCleanUpNonPresentDevice	true		
PersistAllDeviceInstalls	true		



_	_							
7	: Im	age Configuration Editor						
C	om	imunity <u>H</u> elp						
			\sim					
		Answer File	Setting	95 Properties				\sim
	×	🔄 Usb 🔺						
		FeaturePack			\frown			Filter view by: 3 Generalize
		🔒 LanguagePack	Name	2	A Value	Path	Pass	
		Product	6	DoNotCleanUnNonPres	e true	Windows prep v86	D3*	
		Operating System		Donotcleanophoni res	em true	windowsprep_xoo		
		Foundation Core	56	PersistAllDeviceInstalls	true	Windowsprep_x86	P3*	
		Windows Embedded Edition			\sim			
		🖓 BrowserService_x86						
		🗇 Core-Settings_x86						
		🗇 Deployment_x86						
		🗇 DNS-Client_x86						
		🗗 ErrorReportingCore_x86						
		🗇 IE-ClientNetworkProtocolImpl						
		🗇 International-Core_x86						
:	ŧ.	🖓 International-Core-WinPE_x86						
		🕼 Kernel-PnP_x86						
		🛃 LUA-Settings_x86						
		🖓 NetBT_x86						
		Networking-MPSSVC-Svc_x86						
		🗗 PartitionManager_x86						
		PnpCustomizationsNonWinPE						
		PnpCustomizationsWinPE_x86						
		PnpSysprep_x86						
		Printing-Spooler-Core_x86						

Figure 11: PnpSysprep_x86

- 7. In the Answer File pane, Click Product->Operating System->Foundation Core->Windows Embedded Edition, and go to the right window Settings, change File view by to 4 Specialize and provide the ProductKey value.
- 8. After adding all the components, dependencies have to be resolved because some of the components added above may depend on some components to be successfully installed.

To validate go to **Validate->Validate Only** (or simply press F5). After the validation is complete, the Message Window will list all the dependencies as shown in the below image:

al ormation Services - IIS	Printing Utilities and Management Diagnostics
ent er	
9	Estimated Footprint: 35.2 KB / 1.66 GB
nnections	Messages
liance	XML (0) Validation (44) File Copy (0) Import PMQ (91)
vices	Description
ice	 Dependencies of the source package are not satisfied.





Double click on the dependency which is to be resolved.

rmation Services - IIS t	Printing Utilities and Management Diagnostics
	Estimated Footprint: 35.2 KB / 1.66 GB
nections	Messages
ance	XML (0) Validation (44) File Copy (0) Import PMQ (91)
ces	Description
	Dependencies of the source package are not satisfied.
Double Click here	😣 Dependencies of the source package are not satisfied.
	😣 Dependencies of the source package are not satisfied.
	😵 Dependencies of the source package are not satisfied.
	Dependencies of the source package are not satisfied.

Figure 13: Resolving Dependencies

Check the box "requires all of". This will add all the required packages to the answer file.

Below is the example of resolving the dependency by checking the "COM OLE Application Support".

indard 7	l : Image Conf	iguratio	n Editor	
sert	<u>C</u> ommunity	<u>H</u> elp		
?				
	Answei	r File	Settings Properties	
ndard 7	LD Fe	ature .NET	Resolve Dependencies OM+ Application Support	
		Appl	requires the following package dependencies be satisfied. Please select how to satisfy all dependencies. Once all dependencies are resolved, click OK to commit your changes to your configuration.	
Environ t	me 🔒	Boot	 Com OLE Application Support Core File System Contains optional dependencies (Resolved) Domain Services Help and Support Engine NET Framework 2.0 Client Profile Network and Sharing Center Remote Access Service (RAS) 	
IIS	 Estimated 	Devi Devi Diag	 ✓ Remote Access Service (RAS) ✓ Application Security ✓ Shell Controls and UI Support Functions ✓ Microsoft Management Console (MMC) 	
	XML (0)	Valid		



Click the "**OK**" button:



d 7\D			
	- Feature	🖳 Resolve Dependencies	X
	.NET .I .I .Appl 	COM+ Application Support requires the following package dependencies be satisfied. Please select how to satisfy all dependencies. Once all dependencies are resolved, click OK to commit your changes to your configuration.	55
		▲ ♥ requires all of (Resolved) ♥ COM OLE Application Support	
onme	Boot	Core File System	
	Rrow	✓ contains optional dependencies (Resolved)	
		Domain Services	
		Help and Support Engine NET Eramework 2.0 Client Profile	
	-	V. Network and Sharing Center	
	2	Remote Access Service (RAS)	
	📙 Devi	Application Security	
	🔲 🗖 🕻	Shell Controls and UI Support Functions	
	□ C □ F	Microsoft Management Console (MMC)	
	🔄 Diag		
	•		
	Estimated Footp		
	Messages		
	XML (0) Valid Descriptio	Estimated Footprint: 11.0 MB / 1.68 GB Click ok to continue	
	🐼 Dependencie	בי טו נווב גטעורב שמרגמעב מוב ווטר גמנוגוובע.	-11
	Dependencie	es of the source package are not satisfied	

Figure 15: Click Ok on Resolve Dependencies

Similarly resolve all remaining dependencies.

Note: You should resolve all the other dependencies using similar method before moving on to the next step.

Now the Answer File is ready for Deployment. So go to **File**->**Save Answer File** <u>A</u>**s**... (Or simply press Ctrl S), and save it as any name, for example Aries.xml.



6.4 Creating a USB installation media

- Take one 4GB or bigger sized thumb drive called **thumb drive1**. Connect the **thumb drive1** to the development PC. Format it to the Windows NTFS file format. Note the thumb drive's Drive letter assigned to it such as **I**:
- Go to Image Configuration Editor again where the **Aries.xml** answer file is open. If the file is not open then open the answer file.

Go to Tools->Create Media->Create IBW image From Answer File...



Figure 16: Create USB installation media

The Window to configure the target folder where the image has to be created will appear. Give the thumb drive drive-letter such as **I**: as below:

Note: Please only use "driver letter followed by :" like I: and not I:\

	- Seciadanter		Description
	Schort		Footprint
+	Sustem		Id Id
	Jich		Keyword
	FeaturePack		Parent Packages
orage	.NET Framew	ork	Path
-	Application	Create IBW Disk	
'S	🔒 Boot Enviror	3 	
	Browsers	Select the target folder for the image	in
g Features	🔒 Data Access	Ŀ	
	📑 Data Integrit		
media	Shadow		OK Cancel
	Devices and		
n Services - IIS	Diagnostics		
	📙 Embedded Er	nabling Features	
	📑 Fonts		
ss Activation Servi	Graphics and	Multimedia	
	📑 International		

Figure 17: Create IBW Disk

Click on the "**OK**" button. It will take few minutes to create the image. Once the image creation is successful, the image is ready to be installed on the target board.

Insert the **thumb drive1** in the Aries SBC and start the computer. Windows will start loading. Wait until the following Window appears:



MICROSOFT PRE-RELEASE SOF	WARE LICENSE TERMS	1
MICROSOFT WINDOWS 7 OPER	ATING SYSTEM RELEASE CANDII	DATE
These license terms are an agree where you live, one of its affiliate release software named above, v any. The terms also apply to any	ment between Microsoft Corporati s) and you. Please read them. The rhich includes the media on which Microsoft	on (or based on y apply to the pre- you received it, if
· updates,		
· supplements,		
Internet-based services, and		
support services		<u>.</u>
I accept the license terms		

Figure 18: Install Windows

Note: Don't connect any other bootable media. If any other bootable media is connected like a hard drive then change the BIOS boot order to boot from **thumb drive1**.

Accept the License terms and click "**Next**". The next screen will be to select the language settings. Click on "**Next**" button the default is **US-English**.

Note: If any other language is required, then the language has to be added while adding components from the **Language Pack** as mentioned earlier (See MSDN documentation).



💐 Install Windows			X
NON CONTRACTOR			
	Windows [.] 7		
	6		
Language to install:	English 📐		
Time and currency format:	English (United States)		
Keyboard or input method:	US		
Enter your language a	and other preferences and click "Next" t		
Copyright @ 2009 Microsoft Corporation. All in	ghts reserved.	Next	

Figure 19: Select US-English

Next step is to configure the target where Windows Embedded Standard 7 will be installed. The window asks "Where do you want to install Windows". Ensure that the SATADOM is formatted as mentioned in **Appendix H** before proceeding further.

If a SATADOM is connected to the SBC in its SATA interface, the Windows 7 OS must

> Choose the SATADOM disk as destination for installation:

	Name	Total Size	Free Space	Туре
S	Drive 0 Partition 1: RECOVERV	21.5 GB	7.7 GB	Primary
Se la	Drive 0 Partition 2: OS (C:)	256.6 GB	131.8 GB	System
9	Drive 0 Partition 3 (D:)	20.0 GB	20.0 GB	Primary
s Befi Loa o mak	esh d driver e changes to partitions, restart Windows	from the installation of	lisc.	

Figure 20: Select SATA DOM to install Windows



Select **SATADOM disk** of 32GB capacity and click next. It will take long time (4-5 hours or more) to complete the installation. There may be several restarts during the installation. After the first restart **remove the thumb drive1** (which has the Setup) from the Aries SBC.

After removing the **thumb drive1** copy the **AutoUnattend.xml** from the thumb drive to some directory. This file will be used later.

Note: If the **thumb drive1** was not removed after first reboot, board may boot from **thumb drive1**. In that case the following screen will appear:

S Install Windows	2012
vvindows /	
Language to install: English	
Time and currency formats English (United States)	
Keyboard or input method: US	
Enter your language and other preferences and click "Next" to continue.	
Copyright @ 2009 Microsoft Corporation. All rights reserved.	Next

Figure 21: Select Language

Power down the SBC, remove the **thumb drive1**, and continue by restarting the SBC.



Wait until the below shown image appears:

Set Up Windows	
Choose a user name f	Windows Embedded Standard 7 or your account and name your computer to distinguish it on the network. Type a user name (for example, John): Type a <u>computer name</u> : PC

Figure 22: Create Username

Don't configure the User Name details before entering the audit mode. Press **Ctrl+Shift+F3**, the SBC will enter to audit mode. The system will restart and boot to the Desktop.

Whenever the system restarts, the below Window may appear on the desktop. Cancel it by clicking on "Cancel" button:

System Cleanup <u>A</u>	ction
Enter System Out	-of-Box Experience (OOBE) 🛛 🗸 🗸
✓ Generalize	
Shutdown Options	
Reboot	~

Figure 23: System Preparation tool



Another error message such as the one shown below may appear if there is any problem with sysprep due to the speed limitation of the thumb drive. Click "**OK**" button and continue with the next step.



Figure 24: Error while querying for pending operations

Open a command prompt with administrator privilege. Enter the following command.

C:\> C:\Windows\System32\sysprep\sysprep.exe /audit /generalize /shutdown

Wait for the system to be shutdown properly.



6.5 Extracting WIM File

Note: This step is required only if the .wim file has to be created so that the same image can be used multiple times. Otherwise proceed with the next step.

- 1. Connect the SATADOM which contains Windows 7 and the SATADOM which contains the WES installed to the Aries SBC.
- **2.** Boot the SBC from the SATADOM.
- **3.** Windows built in **ImageX** tool can be used to capture the image, if ImageX tool is not present, copy the imageX tool to the C:\Windows\System32 folder.
- 4. Open the command prompt with Administrator privileges and run the below command:

C:\Windows\System32> imagex.exe /capture d: c:\Aries.wim 1

Elapsed time: around 5 minutes.

Here **D**: is the Drive letter for SATADOM which has the installed WES 7 image, **Aries.wim** is the file name for the file that will be created (any name with file extension as .wim can be used). The last argument is numeric **1** to provide permissions to ImageX tool. The **Aries.wim** file should be created in current directory.

5. The image can now be copied to any other SATADOM disk with 32GB capacity say SATADOM 1.

Before proceeding further make SATADOM1 Bootable by following the steps mentioned in Appendix A.

To apply wim image to SATADOM refer Appendix I.

6.6 Using the Final image:

Power on the Aries SBC with SATADOM1 if the above steps are followed, otherwise with SATADOM. This will boot to the desktop in audit mode. (Time may be 1 hour or more)

- 1. The desktop can now be customized.
- 2. When the system restarts the below window on the desktop may appear. Cancel it by clicking on cancel button.

stem Preparation Tool ardware independence	(Sysprep) prepares the machine for and deanup.
ystem Cleanup <u>A</u> ction	
Enter System Out-of-B	ox Experience (OOBE) 🛛 🗸 🗸
✓ Generalize	51 ²
Shutdown Options	
Robert	

Figure 25: System Preparation tool for final image



3. If the below image appears because sysprep is facing some problem because the USB drive is slow. Click **OK** and continue with the next step.



Figure 26: Error while using Final image

4. Here you can install and customize whatever you need. For installing Display and Top Cliff Drivers for Aries, follow the steps mentioned below.

6.7 Installing Drivers and Software for Aries

Copy the driver folder provided with this document to a USB drive (Say **USB drive 4**), and connect the USB drive to the Aries SBC.

- 1. Installing **HyperTerminal:** Copy the files from **hyperterminal** folder to **c:\windows\system32**.
- 2. Copy the Programs to Demo Final Image:
 - Copy the AriesTestAppsv0.1 Folder to C:\ Directory.
- Installing Display Driver: Run the Driver\Graphics\Intel_EMGD.WIN7_PC_Version_36_15_0_1091Setup.exe
- 4. Installing USB 3.0 Driver: Run Driver\Intel(R)_USB_3.0_eXtensible_Host_Controller_Driver_3.0.5.69\ Setup.exe
- Installing Network Adapter driver: Run the Driver\PROWin32\APPS\SETUP\SETUPBD\Win32\SetupBD.exe and restart the system on successful installation.
- Installing Windows Embedded IO driver: Run the Driver \Intel Atom Processor E3800 Embedded IO Drivers for Windows 7 (32bit & 64-bit) - MR1\Intel Processor Win7 IO Drivers 32Bit.msi
- 7. Installing Diamond System Universal Driver 7.0.0:

Run the **Driver**Installer\dscud.exe

Double click the "dscud.exe" file and follow the instructions. This program will detect whether the driver has already been installed. In case the driver is installed already, the board list screen will appear. For the uninstalled case, the following screen will appear.



• Click on "Next" to proceed to the license agreement screen.



Figure 27: Universal Driver 7.0.0 installation wizard

 Read and Click on "Accept" on the End User License Agreement screen to proceed with the installation process.

📂 Diamond Systems Universal driver 7.0.0 Device Manager
S PROPERTS
END USER LICENSE AGREEMENT
IMPORTANT NOTICE READ THIS BEFORE INSTALLING, DOWNLOADING, COPYING OR USING THE SOFTWARE PROVIDED TO YOU BY DIAMOND SYSTEMS CORPORATION THROUGH ANY MEDIUM OR DELIVERY MECHANISM.
Accept Decline

Figure 28: End User License Agreement



• Click on "YES" when the pop up shown below is displayed to proceed with the installation.



Figure 29: Install Universal Driver 7.0.0

• During the installation of Diamond System's Universal Driver 7.0.0 driver, the pop up displayed on the screen below is shown.



Figure 30: Installing Universal Driver 7.0.0 software



- During the installation of Universal Driver 7.0, the screen appears as shown for the driver signature.
- Choose "Install this driver software anyway" option.



Figure 31: Windows Security

Add ISA Board

- Click the "Add ISA board" to add a new ISA board. The screen shown below will appear.
- Choose the board name, base address, IRQ from the combo boxes and click on "Install" to add the board.

Add ISA	Board	
Board Nam Description	e Aries 👻	
PC/104-Pl	us SBC with Intel E3800 CPU, On-Bo 🔺	
	шь	
Base Addre	ss 280-28F	
IRQ	5 🗸	

Figure 32: Add ISA Board



• Clicking on "Install" will lead to the screen shown in Figure 33.



Figure 33: Adding Aries SBC

• On successful addition of the ISA board, the screen will appear as shown in Figure 34.

📴 Diamond Systems Universa	Diamond Systems Universal driver 7.0.0 Device Manager	
		Help
Device	Bus IRQ	Port
Aries	LPC 5	0x280 - 0x28F
Uninstall DSCUD 7.0.0	Add ISA board	EXIT

Figure 34: Universal Driver 7.0.0 Device Manager



6.8 Booting to Windows Welcome Mode

 Open the command prompt with administrative privilege and run the following command: C:\Windows\System32\Sysprep\sysprep.exe /oobe /generalize /shutdown

This SATADOM drive contains the final OS. Whenever this SATADOM drive is booted, it will boot to the Windows Welcome screen. To continue booting to Windows Welcome, follow the below steps.

Note: Take dump of the Windows Embedded Standard 7 by following the steps mentioned in section <u>Step 5: Extracting WIM File</u>. This will be the image to be applied to the Aries SBC.

- 2. Restart the SBC with the SATADOM connected. It will reach the Windows Welcome screen and ask for First time boot inputs.
- 3. Now start using Windows Embedded Standard 7 on the Aries SBC.



7. APPENDIXES

Appendix A: Make USB/ SATADOM Drive Bootable

- i. Open a command prompt with administrator privilege.
- ii. Run the following commands:
- C:\Windows\system32> diskpart Microsoft DiskPart version 6.1.7601

Copyright (C) 1999-2008 Microsoft Corporation.

On computer: BIOS-8388

 DISKPART> list disk

 Disk ### Status
 Size
 Free
 Dyn Gpt

 ----- Disk 0
 Online
 232 GB
 1024 KB *

 Disk 1
 Online
 3861 MB
 0 B

Note: here disk 1 is the **USBdrive2** that needs to be made bootable, please take care following step will remove all the data from the disk so select the correct Disk.

- DISKPART> select disk 1 Disk 1 is now the selected disk.
- **DISKPART> clean** DiskPart succeeded in cleaning the disk.
- DISKPART> create partition primary
 DiskPart succeeded in creating the specified partition.
- DISKPART> select partition 1
- DISKPART> active
- DISKPART> format fs=ntfs quick
- DISKPART> assign
- DISKPART> exit

The USB/SATADOM drive is now bootable.



Appendix B: Install Windows Embedded Standard 7 Toolkit on a Development Computer

- 1. To run the Setup.exe command, do one of the following:
 - If you have the Standard 7 Toolkit DVD in the DVD drive, at the command prompt, type the following:
 - <DVD DRIVE :> \Windows Embedded Studio\setup.exe.
 - If you downloaded the **setup.exe** command, run it from the location where you saved it.
- 2. Follow the instructions in the installation wizard.
- 3. On the **Setup Type** page, do one of the following:
 - To install the tools and distribution share to the default location, select Complete. The default location for 32-bit is
 [System Drive]:\Program Files\Windows Embedded Standard 7 and for 64-bit is
 - [System Drive]:\Program Files(x86)\Windows Embedded Standard 7.
 - To install the tools and distribution share to a different location, select **Custom**.
- 4. Follow the instructions in the installation wizard to complete the installation for Standard 7 Toolkit.

Appendix C: Test HTTP Server

- 1. Make a copy of html file say index.html to "C:\inetpub\wwwroot" folder.
- And add this as the default web page to load by editing the *applicationHost.config* file present in %WinDir%/system32/inetsrv/config. Open the *applicationHost.config* file and search for "iisstart.html" and replace it with "*index.html*". Save the file and try to access the index.html file from a different computer as:
 - Open Internet Explorer in the development system also present in the same domain as the Aries board.
 - Type <u>http://192.168.0.1/index.html</u> and give Enter.

Note: 192.168.0.1 is the IP address of Aries board, this address can be found by using ipconfig command in command prompt.

The index.html page placed in "C:\inetpub\wwwroot" will be displayed on the development system's Internet Explorer.



Appendix D: Test FTP Server

- 1. Click on **Start** and then **Run**.
- Type the following command in the Open: text box, and then hit the Enter key or click on the OK button.
 Inetmgr

IIS Manager should display right away. Below shown image is of IIS manager only.



Figure 35: IIS Manager

3. Go to the left panel i.e. "**Connections**" panel and Right Click on the computer name showing in the list and select **Add FTP Site**.... as shown in the below image.



Figure 36: Add FTP Site



4. After Selecting Add FTP Site you will get below shown image.

	AthenaIII SBC - 1.0.doc [Compatibility Mode] - Microsoft Word (Product Activation Failed)	X
File Home Insert Page Layout Referen	nces Mailings Review View Nitro Pro 7	۵ ()
Cut Copy Paste ✓ Format Painter Clipboard r₂ Font	C A' Aa* 例 注 * 注 * 注 * 注 * 注 * 注 * 注 * 注 * 注 *	Find ~ e Replace Select ~ Editing
Internet Information Servic Image: Servic	Add FTP Site Add FTP Site Site Information Th ride area Deen Feature Deen Feature	
▶. ♥ BIOS-8827 (INDIA\kan	Prins de name Anage Server Lestart Lestart Lest Physical path: Physical pat	
Page: 31 of 31 Words: 2,991 3	Previous Next Finish Cancel	■ * * * * * * * * * * * * *
🌝 o 🕙 🈂 🔚	O. 🖏 Y 🖿 🗢 🐯 O. 🖉 N. KS 🖳 🕉 📢 🔹 - D.D.	1/2/2013

Figure 37: Enter Site Information

5. Here Type the following inputs and **Click** next. <u>**FTP site name: Test**</u>

Physical path: C:\inetpub\ftproot

6. After clicking next you will get below shown image. Just Select "No <u>SSL</u>" and Click next.

Port:
21

Figure 38: Binding and SSL Settings



7. The next screen will be the Authentication and Authorization Information Window as shown below.

Add FTP Site		? 🔀
Authentication and Autho	prization Information	
Authentication		
Basic		
Authorization		
Allow access to: Not Selected	•	
Permissions		
Read Write		
	Previous	Finish Cancel

Figure 39: Authentication and Authorization Information

Configure the following settings:

- Here Select the *Anonymous* and *Basic* check boxes.
- Set Allow access to "Anonymous Users"
- Set Permissions to Read and Write.

The updated Window will appear as:

谢 Internet I	Information Services (IIS) Manager	
	Add FTP Site	• () 🕯
File Vi	Authentication and Authorization Information	
▲	Authentication Image: Constraint of the second s	bis
	Allow access to: Anonymous users	
	Permissions V Read V Write	
	Previous Next Finish Cancel	
Ready		e
1	۰ ۵۰ 🌔 🧶 🎼	2:21 AM 7/17/2013

Figure 40: Select Allow Access to Anonymous Users



Click **Finish** to complete the FTP site adding process.

8. After adding FTP, permissions need to be set. Follow the below steps: Go to FTP Site that you added in **IIS Manager**. Right Click and select **Edit Permissions**.



Figure 41: Edit Permissions

9. Go to Sharing as below in shown Window.



Figure 42: Select Advanced Sharing



- 10. Select **Advanced Sharing**. And make sharing on and give all the permissions to **Everyone** and **Users**.
- 11. Similarly Go to security in the same Window and give all permissions to the current user.
- 12. Open **C:\inetpub** and open Properties of folder "*ftproot* " and select "*Sharing* " tab. Select the "*Share*" button and add Administrator, and Everyone with "*Read/Write*" permission.
- 13. In the "Security" tab, ensure that everyone and Administrator has Read and execute permission.
- 14. Turn Off the **Firewall**: Open Control Panel->System and Security->Windows Firewall. In the Left Tab, select "*Turn Windows Firewall on or off*", the below shown Window will appear:

System and Security ►	Windows Firewall 🕨 Customize Settings	-	44	Search Control Panel	م
Customize setting	s for each type of network				
You can modify the fire What are network locat	wall settings for each type of network location tl ons?	hat you	use.		
Home or work (private)	network location settings				
👩 💿 Turn on W	indows Firewall				
Block a	ll incoming connections, including those in the	list of al	lowed	l programs	
□ Notify	me when Windows Firewall blocks a new progra	m			
🔞 Turn off W	/indows Firewall (not recommended)				
Public network location	settings			S.	
👩 💿 Turn on W	indows Firewall				
Block a	ll incoming connections, including those in the	list of al	lowed	l programs	
Notify	me when Windows Firewall blocks a new progra	m			
🔞 💿 Turn off W	(indows Firewall (not recommended)				
				OK Cancel	

Figure 43: Turn off Windows Firewall

Ensure that "*Turn off Windows Firewall (not recommended)*" is selected under sections **Home or work (private) network location settings** and **Public network location settings**.

15. Restart the system.

e

O

4

- 16. Go to **C:\inetpub\ftproot** Directory and place some Files or folder such as the test application for Aries board which has to be transferred.
- Open Internet Explorer in the development system that is in the same network domain and try browsing to the path by providing <u>ftp://192.168.0.1</u> in the address bar and press Enter to browse.

Note: 192.168.0.1 is the IP address of Aries SBC.

日の



- 18. All the files placed in the **C:\inetpub\ftproot** folder of the Aries board will be available in the Internet Explorer for user to access.
- 19. In the Internet Explorer Go to View then click on "Open FTP site in Windows Explorer".
- 20. There is proper access to FTP Folders. The files can be accessed and copied from this location to local system.

21.

Appendix E: Test OS Product Key License

- 1. Open command prompt with Administrative privilege.
- 2. Change current working directory to c:\windows\system32 using CD command.
- 3. Give the below mentioned command: Cscript.exe slmgr.vbs –dli

Appendix F: Start Hyperterminal

Go to C:\windows\System32\hyperterminal

Double click on hypertrm

Hyperterminal should start.

Appendix G: Create WinPE Bootable USB Drive

Create a bootable thumb drive by following Steps in **Appendix A.** Next, Open a command prompt with administrator privilege in the Windows development System and use the following commands:

xcopy C:\winpe_x86 *.* /e F:\

where winpe_x86 is the WinPE image to be copied to the thumb drive (F:).

This will create a bootable WinPE thumb drive. This can be used to take image dump from the Aries board without the need to connect any external hard disk.



Appendix H: Format the SATADOM

1. Connect a CD drive with windows 7 CD to the Aries SBC and select the CD Drive in the boot priority.

2. When the following screen appears, select the SATADOM of 32GB capacity and click on the "Drive options" and select "Delete".

Name	ition 1: System Reserved	Total Size	Free Space 86.0 MB	Type System
Disk 0 Part	ition 2	13.6 GB	13.6 GB	Primary
🥪 Disk 0 Una	llocated Space	6.3 GB	6.3 GB	
Befresh Load Driver	X Delete	✓ Format	∰ Ngw	

Figure 44: Select SATADOM

3. Power off the board.

4. Since the SATADOM interface to the ARIES SBC is same as the SATA interface (hard disk which contains the OS to boot the board), connecting both at a time in not possible. So in order to boot the board and format the SATADOM, install the Windows 7 OS in the mSATA which should be connected to the mSATA slot and SATADOM to the SATA interface .Now the board can be booted to the windows 7 from mSATA and the SATADOM which will act as the external drive can be formatted.

5. Power on the Aries SBC and format the SATADOM as per **Appendix A**.



Appendix I: Apply WE7 Image

1. Copy the Aries.wim and imageX.exe from the DVD and keep them in some folder in development or target PC. Let us assume that the folder path is C:\Temp.

2. Connect the 32 GB SATA DOM to development/target PC and format the SATA DOM (refer Appendix H) and make the SATA DOM bootable (refer Appendix A).

4. Use ImageX tool to apply the image to the 32GB SATA DOM (Let us assume that the SATA DOM drive is d:\ drive). Run the command as mentioned below.

c:\Temp> imagex /apply ARIES.wim 1 d:

5. It will take minimum 10 minutes to apply the image in SATA DOM.

6. When the applied image is completed, the medium is ready to boot the OS.

7. Restart the SBC with the SATADOM connected. It will reach the Windows Welcome screen and ask for First time boot inputs.